

Rub Proof Tester

Model: I0005

a measurable difference...

IDM[®]
instruments

The Rub Proof Tester is used to evaluate the ink transfer from printed / coated materials from rubbing. Three dead loads are included enabling the user to place one on top of the upper disc to achieve a known pressure. The sample holders are manufactured from stainless steel to enable dry or wet rubs. An interlock on the front door reduces access during a test and prevents particles from being blown out of the working area. Digital cycle counter stops the test at the preset value.

Applications:

- Paper
- Plastics
- Board
- Leather

Features:

- Three different dead loads
- 2" Stainless Steel Specimen Bed
- 4" Stainless Steel Specimen Bed
- Digital Cycle Counter: 0-9999
- High Speed Blower
- Safety Interlock switch
- Set of pressure weights for ½, 1 & 2 lb/in²

Benefits:

- Easy to use
- Fast results
- Accurate

Standards:

- BS 3110


Options:

- Sample cutter

Connections:

- **Electrical:** 220/240 VAC @ 50 HZ or
110 VAC @ 60 HZ

(please specify when ordering)

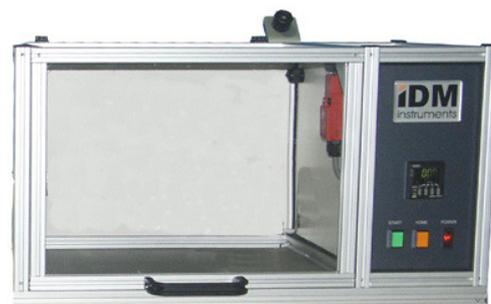

IDM Safety Enclosure

Dimensions:

- **H:** 350mm
- **W:** 500mm
- **D:** 400mm
- **Weight:** 30kg